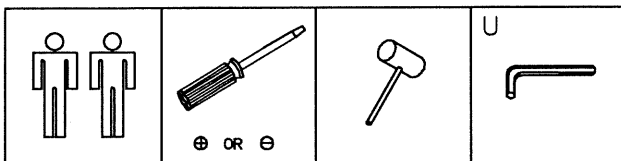


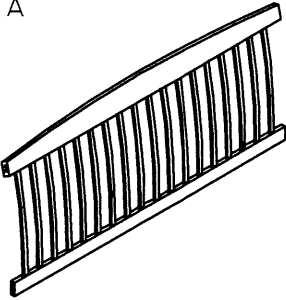


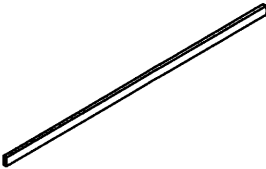
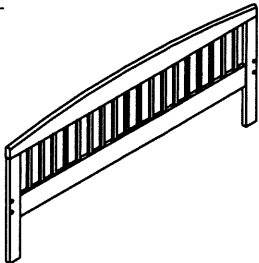
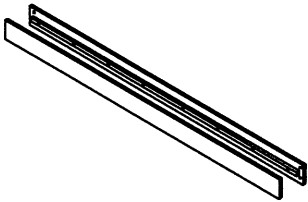


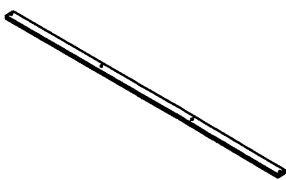
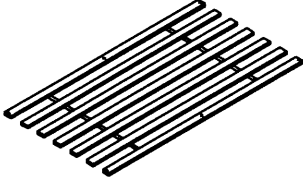
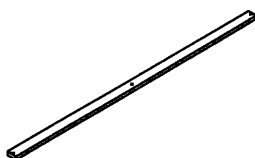


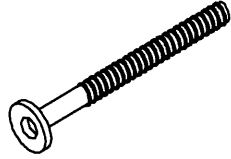
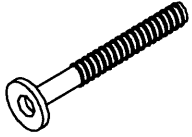
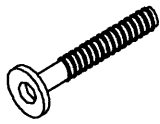

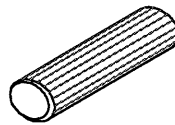


COMPLETED ASSEMBLY




Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

**CAUTIONS :**

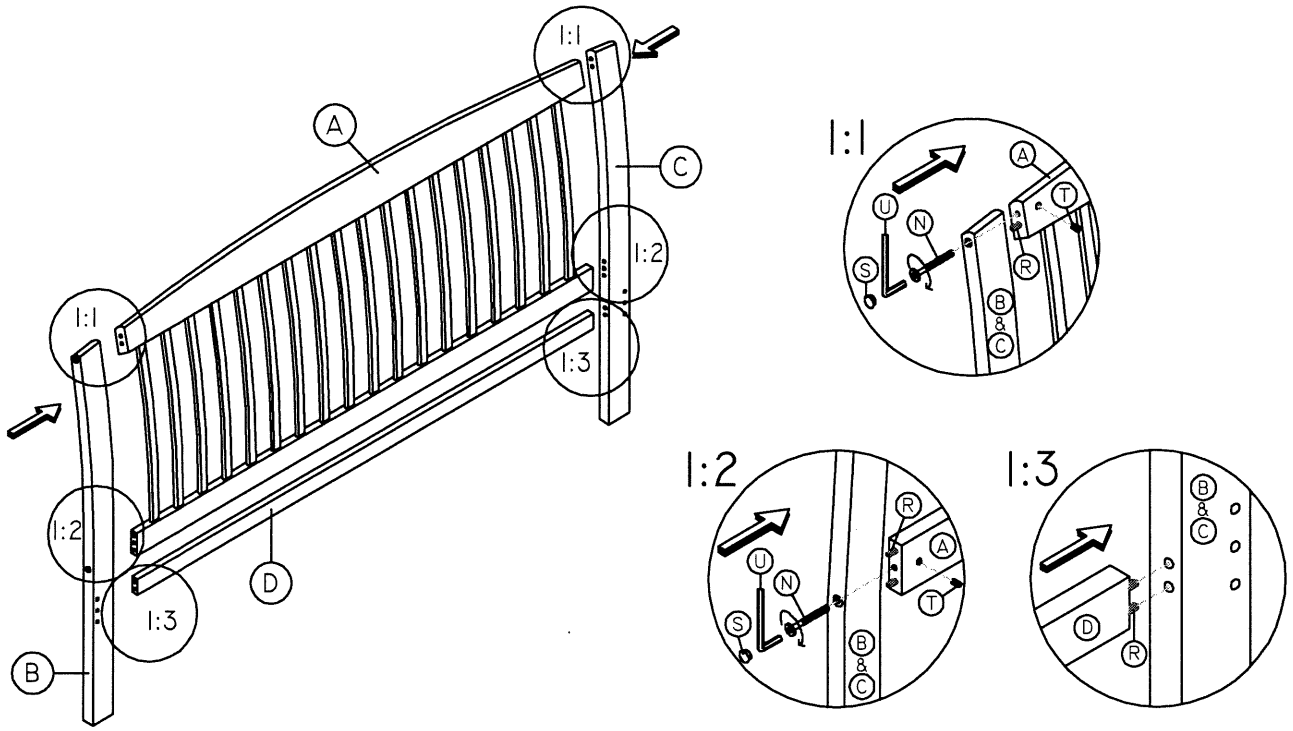
1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tightened the screws and bolts as it may damage the threads.
4. Keep all hardware parts out of the reach of children.

<p>A</p>  <p>HEAD BOARD X 1 PC</p>	<p>B</p>  <p>BED POST LEFT X 1 PC</p>	<p>C</p>  <p>BED POST RIGHT X 1 PC</p>	<p>D</p>  <p>BOTTOM RAIL X 1 PC</p>
<p>E</p>  <p>FOOT BOARD X 1 PC</p>	<p>F</p>  <p>SIDE RAIL X 2 PCS</p>	<p>G</p>  <p>LEG X 2 PCS</p>	<p>H</p>  <p>CENTER RAIL SUPPORT X 2 PCS</p>
<p>I</p>  <p>CENTER RAIL X 1 PC</p>	<p>J</p>  <p>(7 PCS) BED SLAT X 2 SETS</p>	<p>K</p>  <p>CENTER BED SLAT X 1 PC</p>	<p>L</p>  <p>M4 X 25MM CBS SCREW 17 PCS</p>
<p>M</p>  <p>M4 X 30MM CBS SCREW 4 PCS</p>	<p>N</p>  <p>M6 X 100MM JCBC SCREW 4 PCS</p>	<p>O</p>  <p>M6 X 70MM JCBC SCREW 8 PCS</p>	<p>P</p>  <p>M6 X 40MM JCBC SCREW 2 PCS</p>
<p>Q</p>  <p>ADJUSTABLE SCREW 2 PCS</p>	<p>R</p>  <p>M8 X 35MM WOOD DOWEL 14 PCS</p>	<p>S</p>  <p>WOOD BUTTON 12 PCS</p>	<p>T</p>  <p>M6 BARREL NUT 12 PCS</p>


**STEP:1**



**STEP:2**

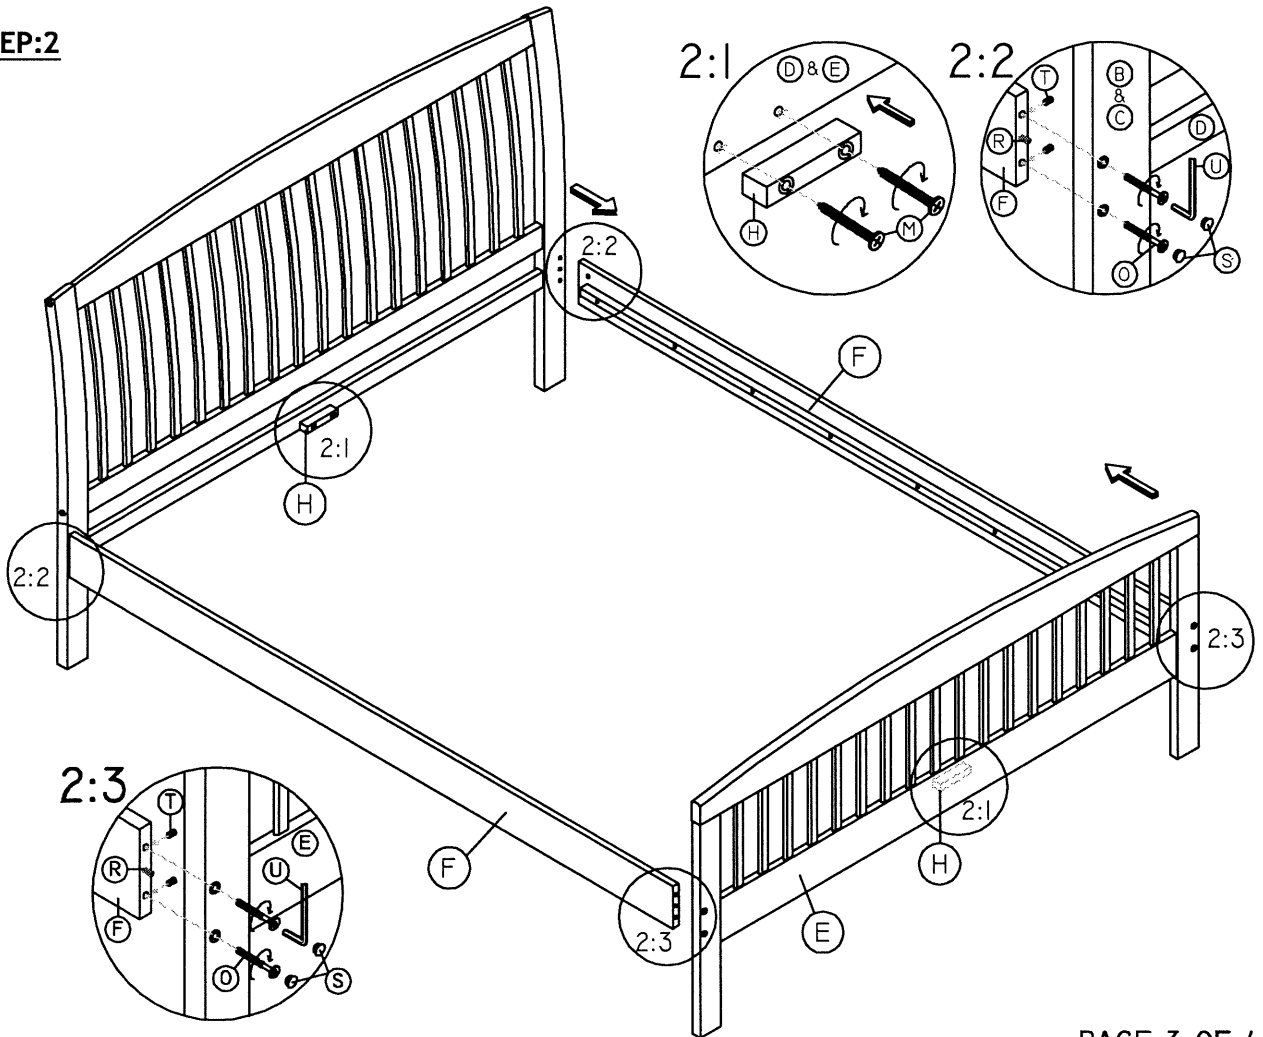

**STEP:3**

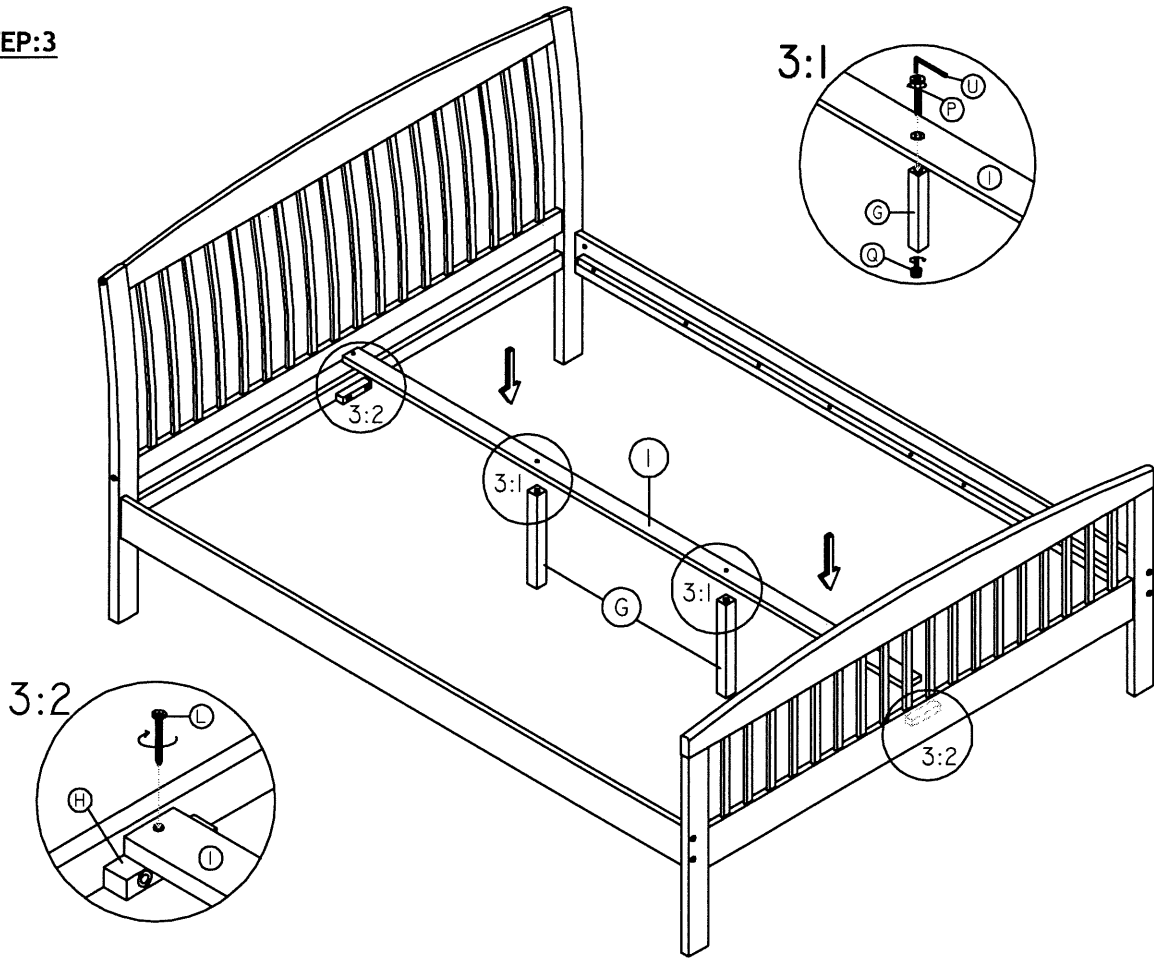

**STEP:4**

