



# TOMRA

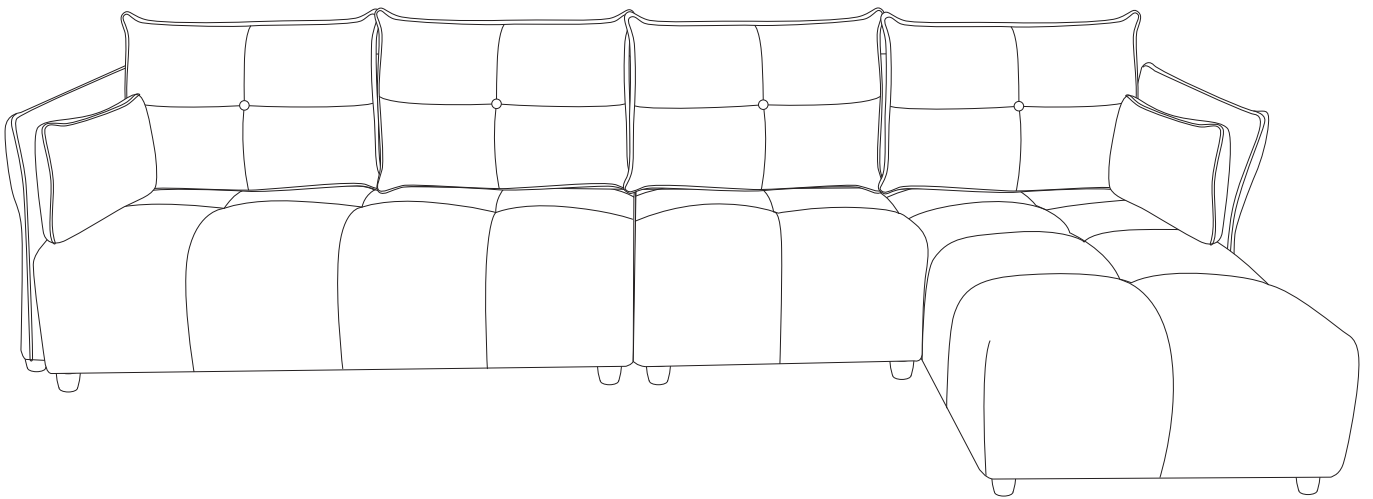

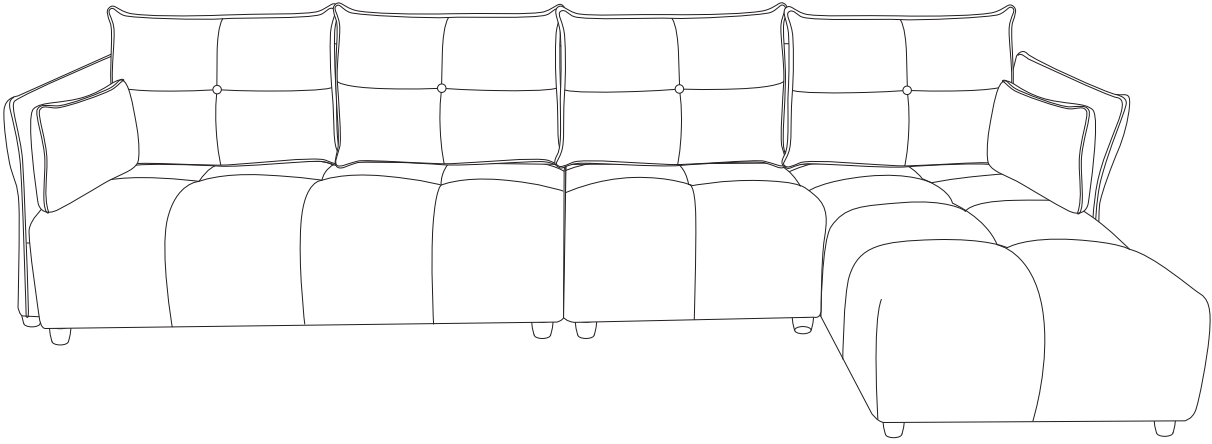

Assembly instructions for the sofa, including tool requirements, time, and personnel.


**Tools:** A screwdriver is required. A power drill is not required (indicated by a crossed-out drill icon).

**Warning:** A warning triangle with an exclamation mark is present.


**Time:** 30' (30 minutes), indicated by a clock icon.

**Personnel:** 2 people, indicated by a person icon.

1 x 4

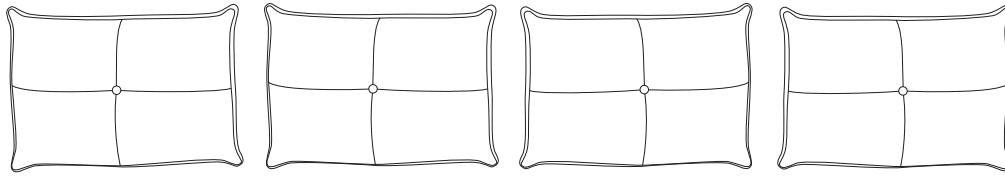

2







3

6 x 2





2


4

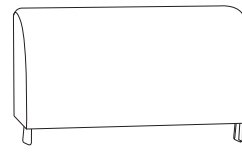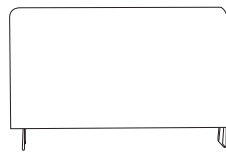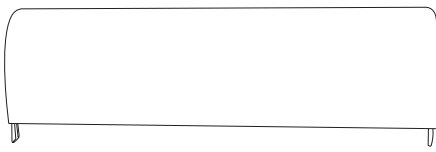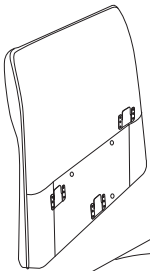


9

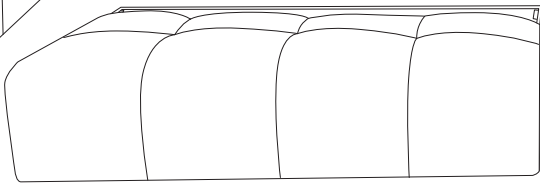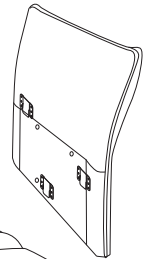

5

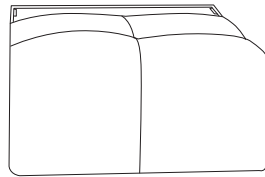


7

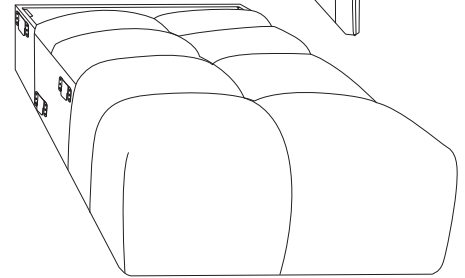


8

A



x 16


B



M4  
x  
70


x 6

1

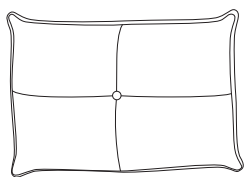

x 4

2




x 2

3




x 1

4

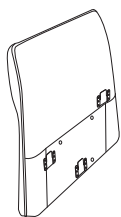


x 1

5

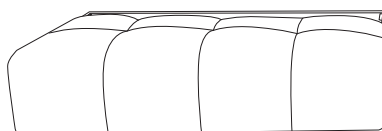


x 1

6

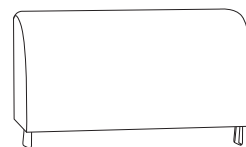


x 2

7

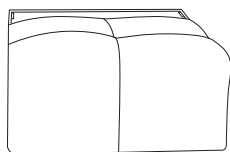


x 1

8

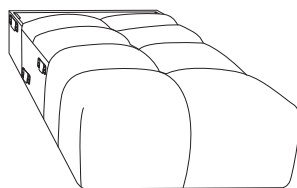

x 1


9



x 1


1

4



x 1

5





x 1

A




x 6

4

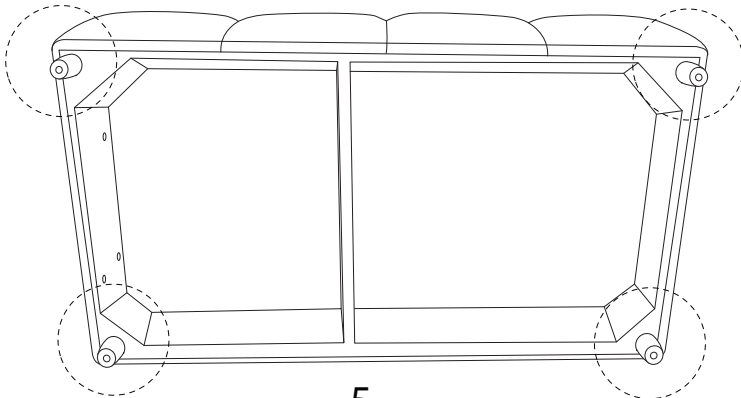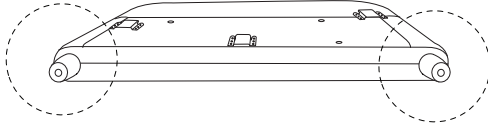

5

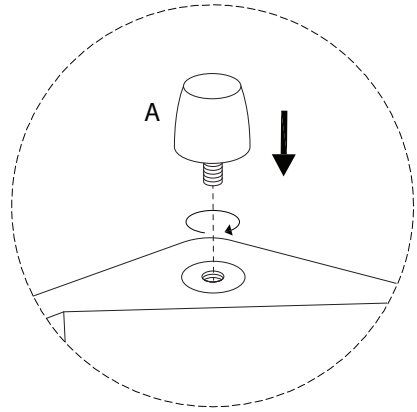


2

3




x 1

3

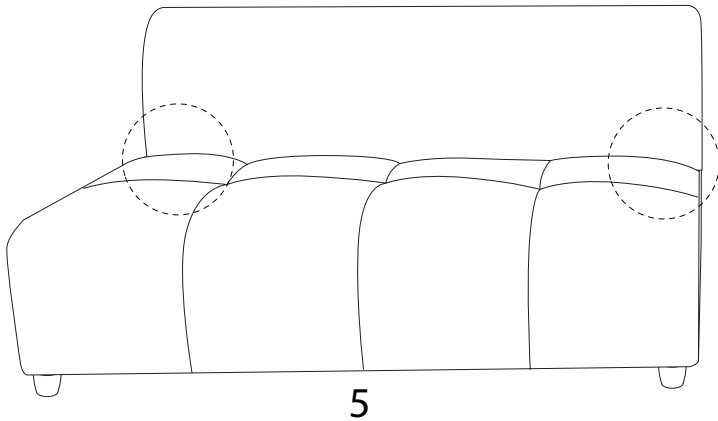


5



1a

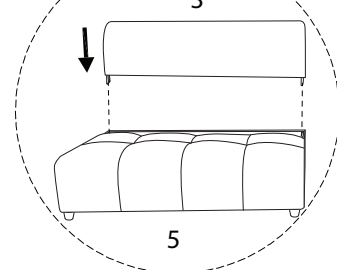


1b

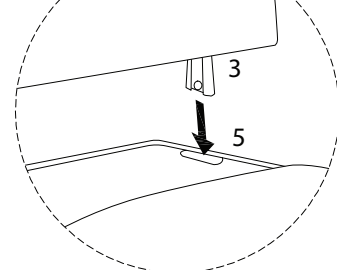



3

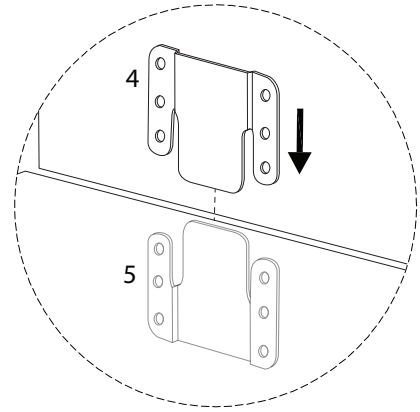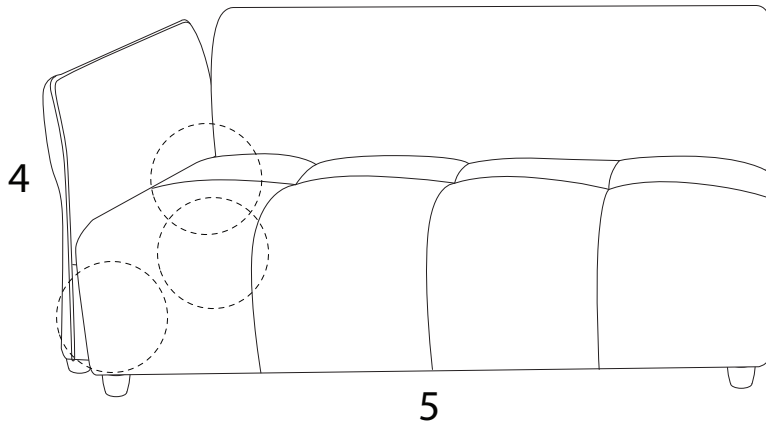



4





5

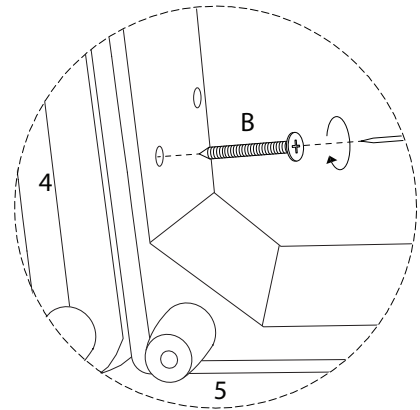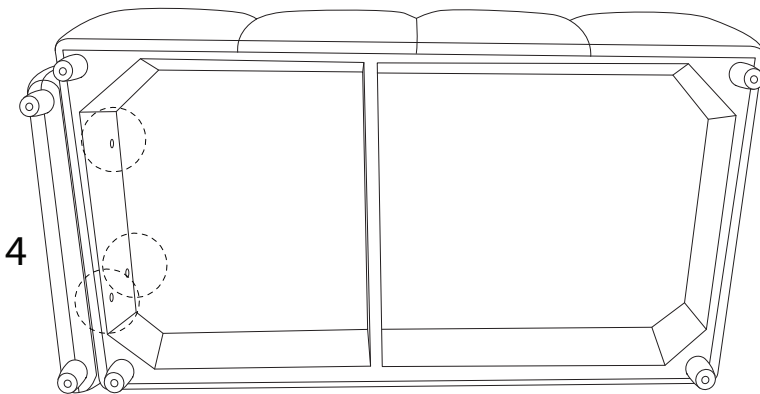



5

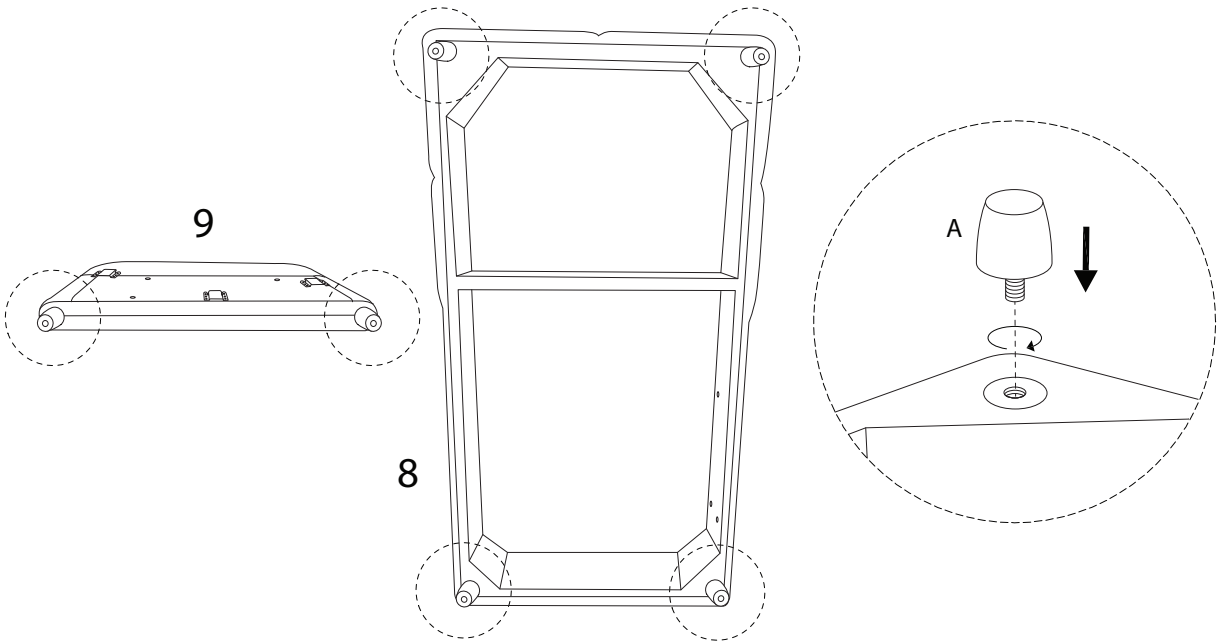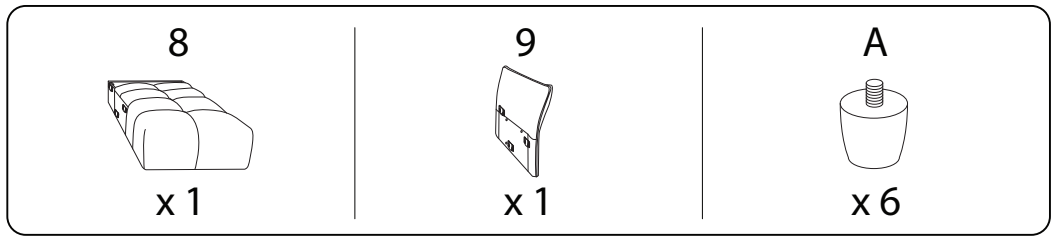

6

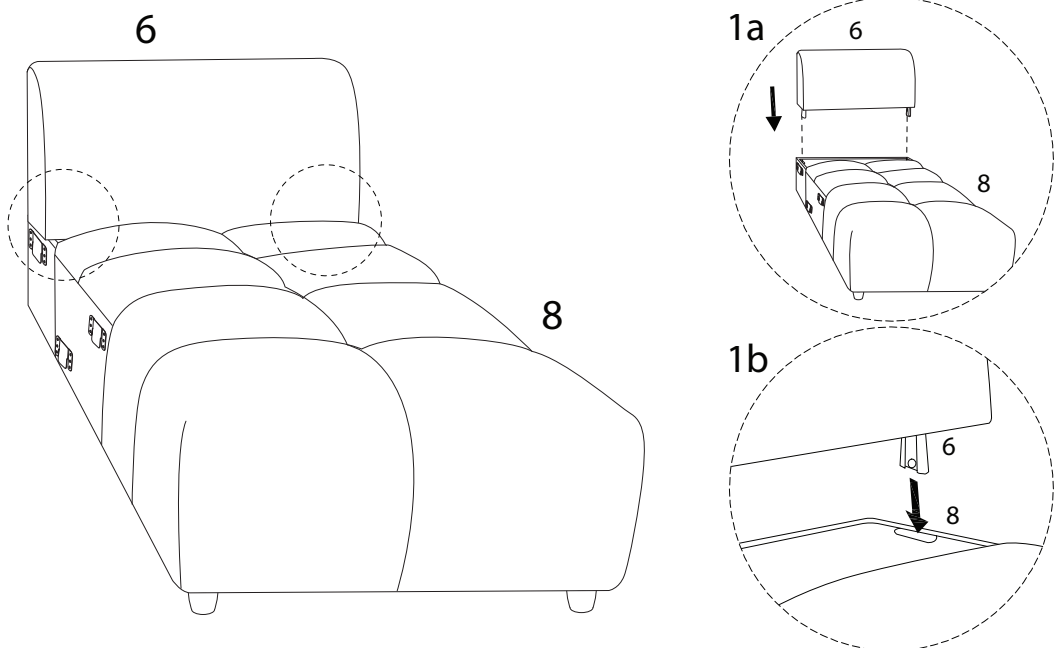
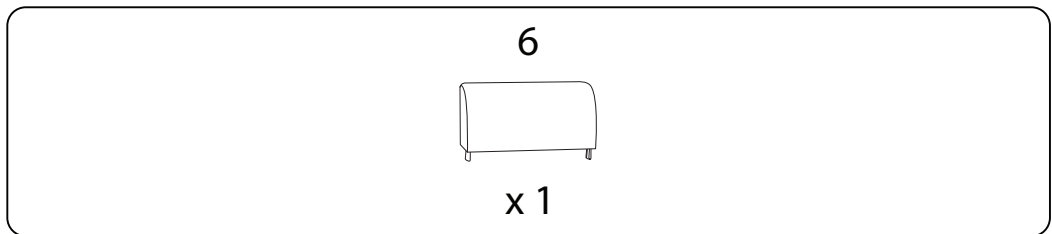


7

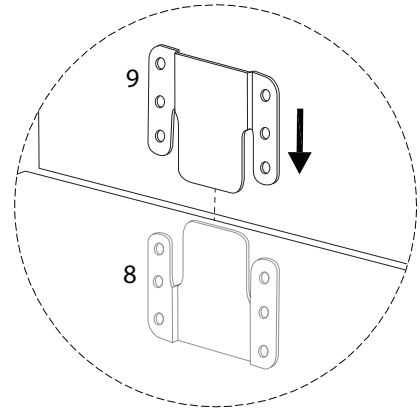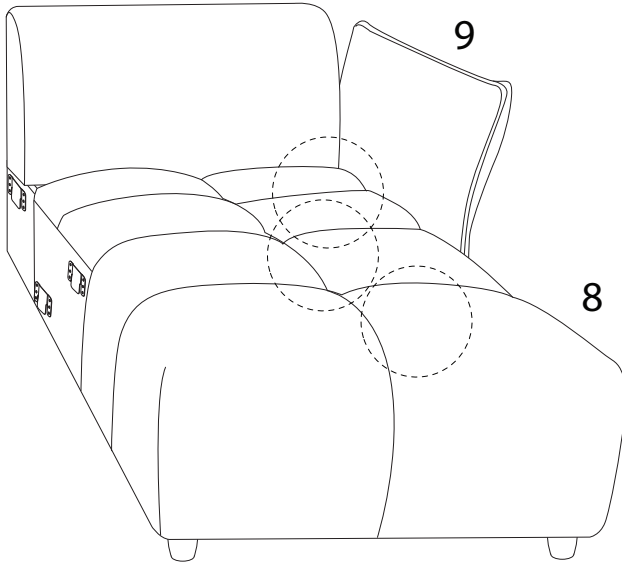

8


B  
M4  
x  
70  
x 3

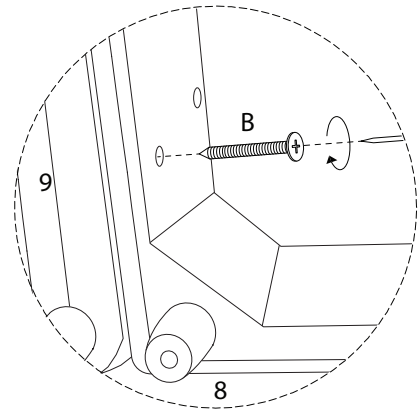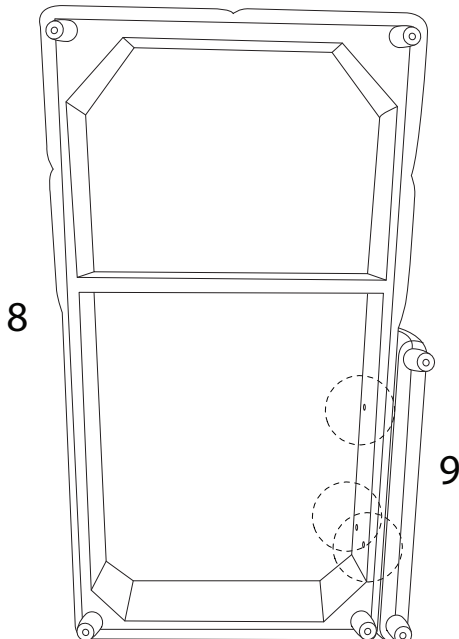



9

7





x 1

A



x 4


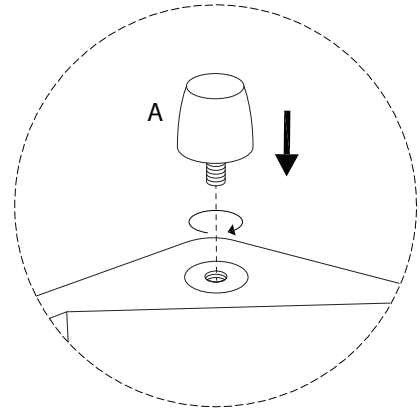
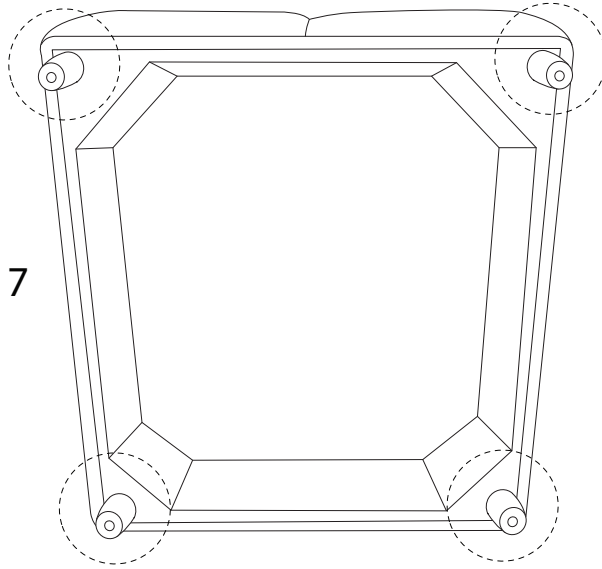


10



6





x 1

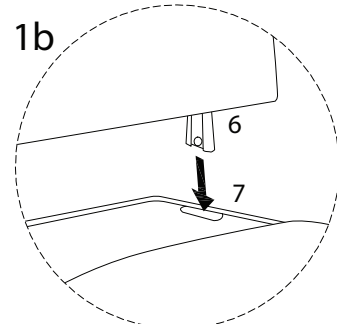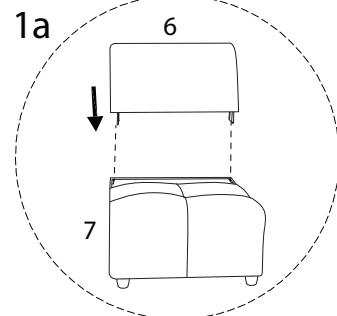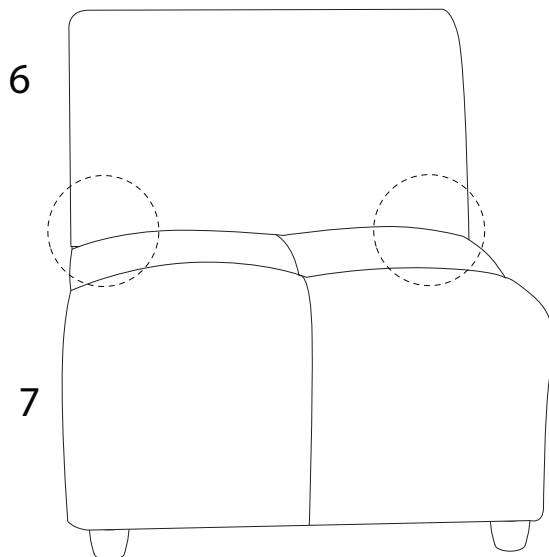

11

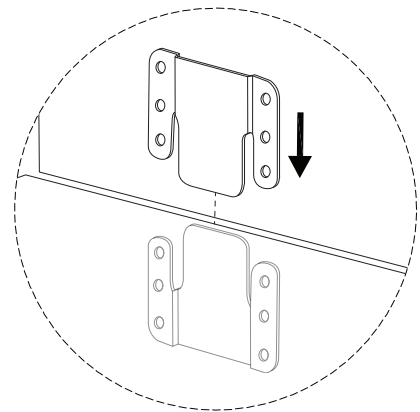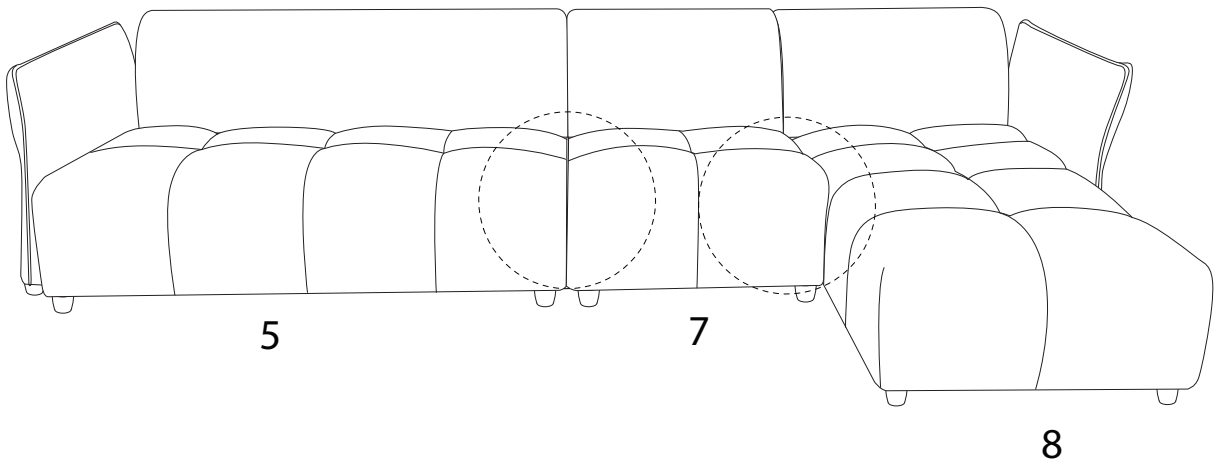

12

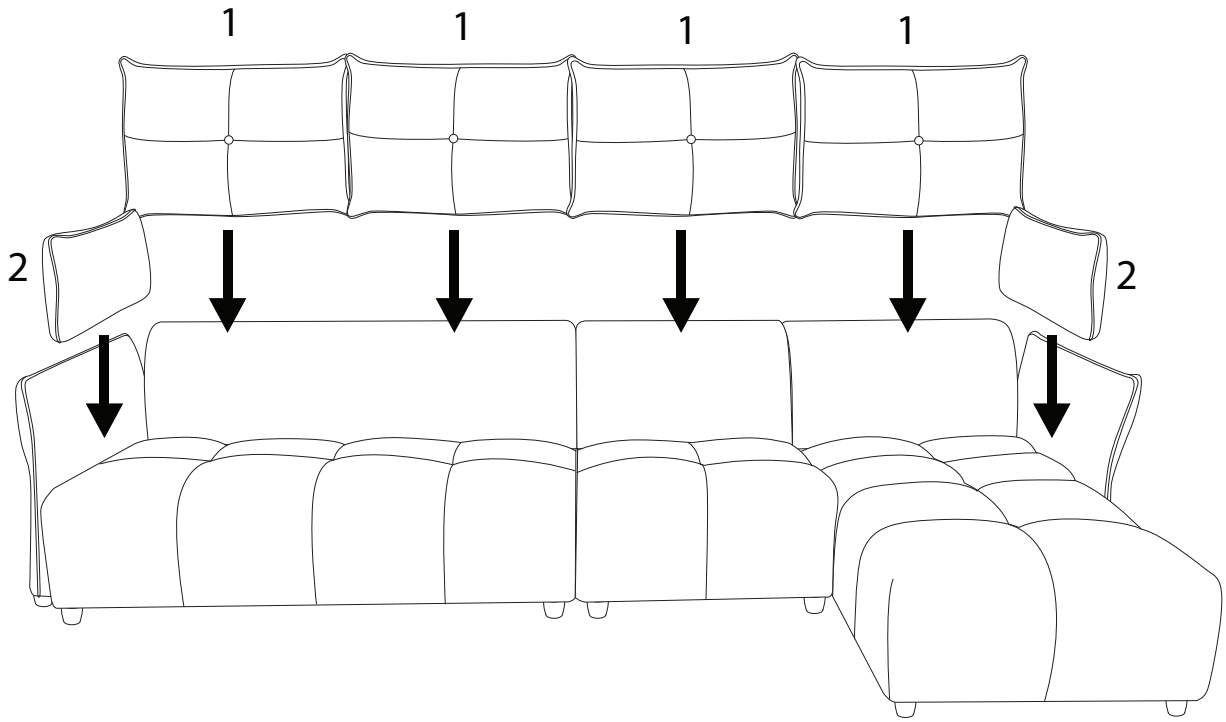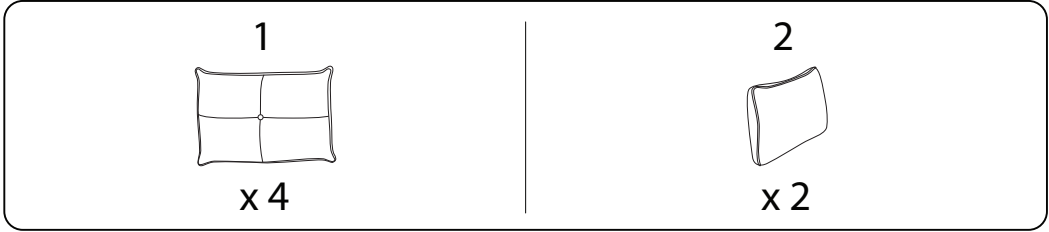

!

